



NOVA LUCE


9540231

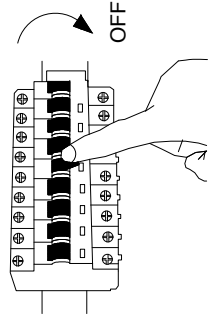


1. Turn off the general switch

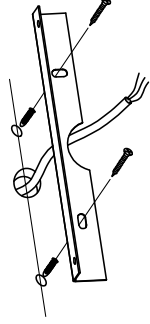


2. Drill holes & apply plastic anchors
With screws

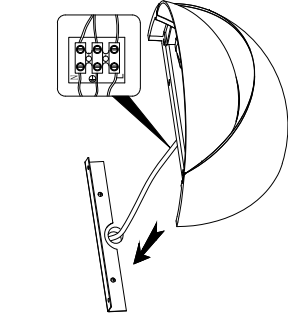


3. Connect the wires

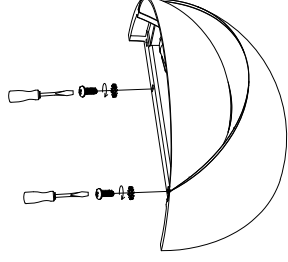

4. Apply top screws

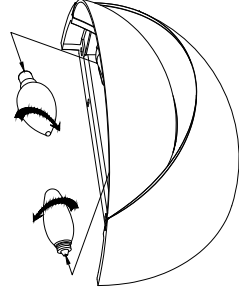

5. Apply the bulbs

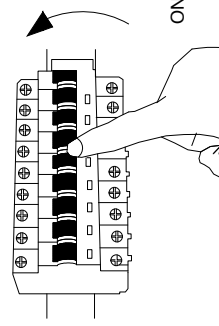

6. Turn on the general switch