


NOVA LUCE


9540241 9540242
9540271 9540272

1

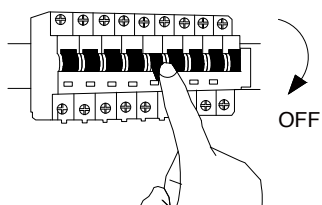


Turn off the general switch

2

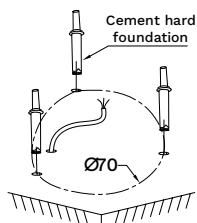


Drill holes & apply cement hard foundation

3

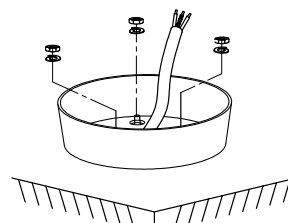


Apply the screw nuts

4

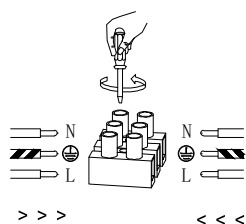


Connect the wires

5

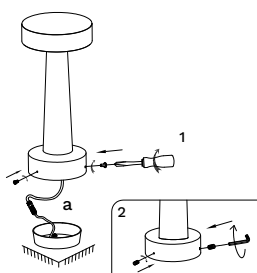

Apply the side screws

5

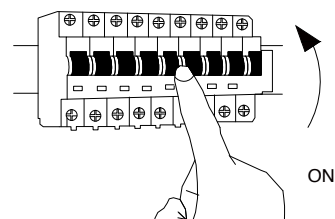

Turn on the general switch

