


NOVA LUCE

INSTALL

9010311 / 9011140 / 9010304


Example of Corner installation

9560010

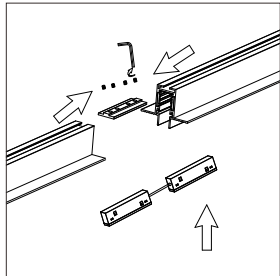


Insert the mechanical connector & tie up screws

9550040

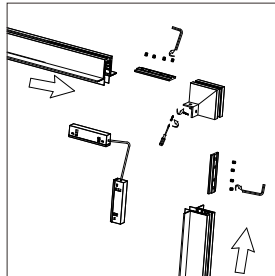


Connect the tracks together by tying up the screws

9550030

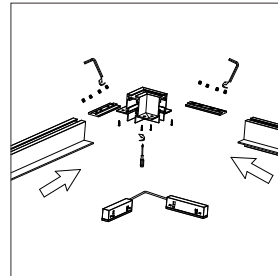


Click the tracks together & tie up the screws

9560010

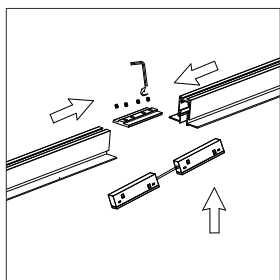


Insert the mechanical connector & tie up screws

9560220

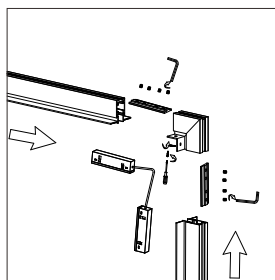


Connect the tracks together by tying up the screws

9560210

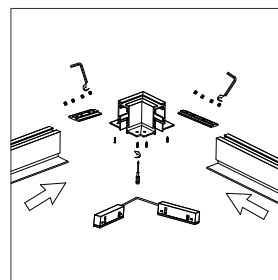


Click the tracks together & tie up the screws

9560010

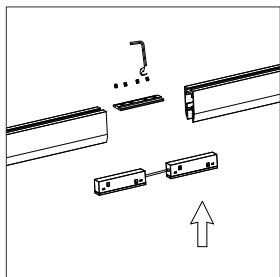


Insert the mechanical connector & tie up screws

9550070

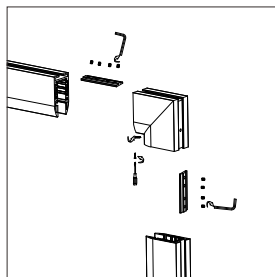


Connect the tracks together by tying up the screws

9550060

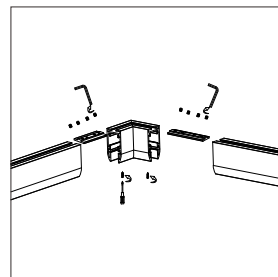


Click the tracks together & tie up the screws

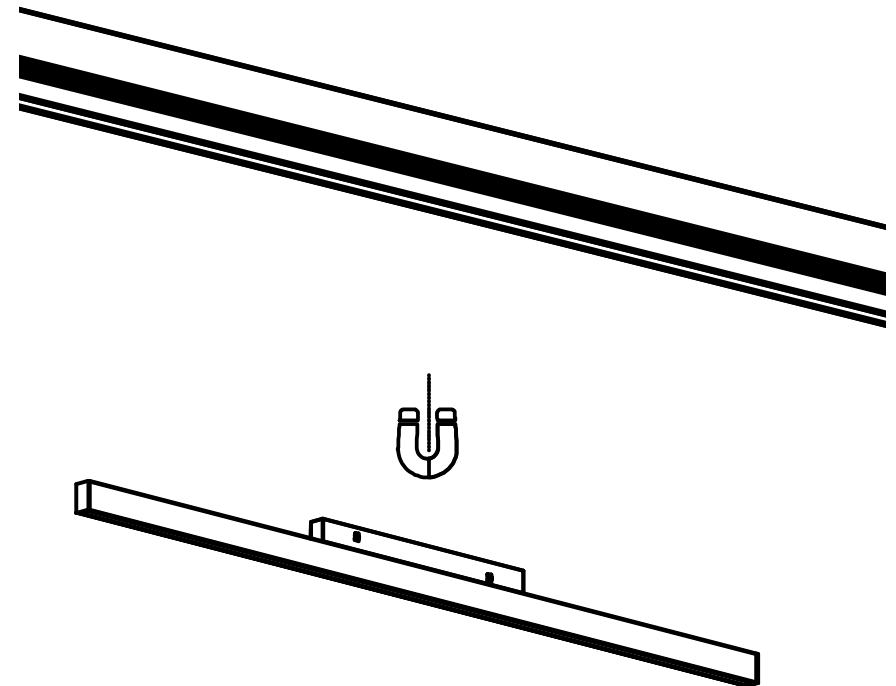

NOVA LUCE


Example of Recessed installation

9550010 / 9550012

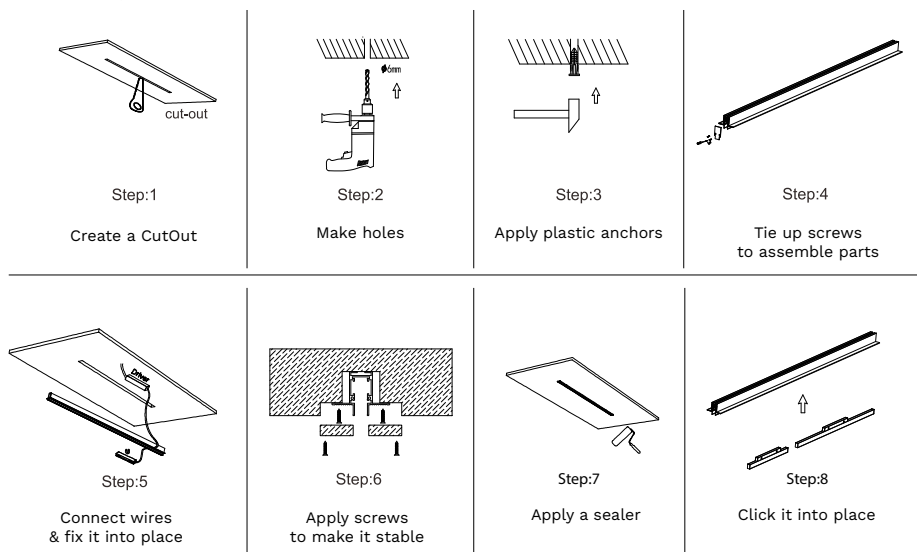


Example of Recessed installation

9550011 / 9550013

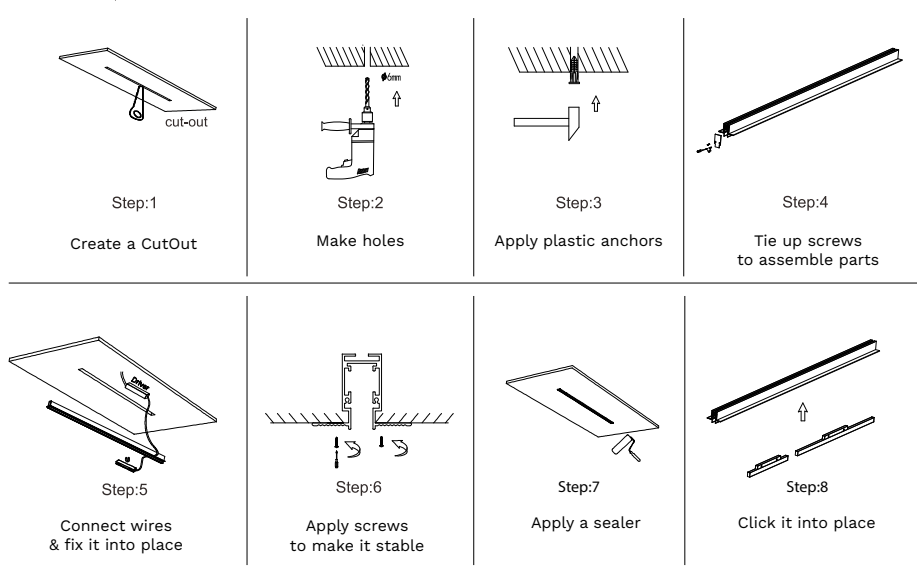

Example of Ceiling installation

9550014 / 9550020

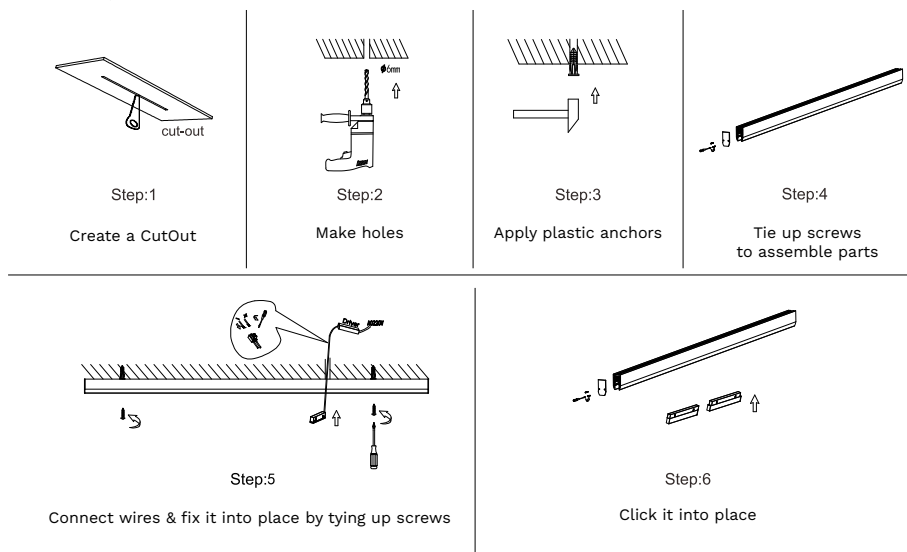

Example of hanging installation

9560030 / 9560040

