NOVA LUCE

9580635

1

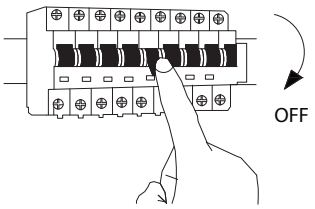

Turn off the general switch

2

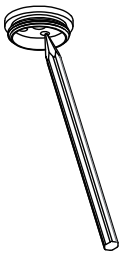

Mark where to drill holes

3

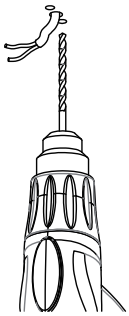

Drill holes

4

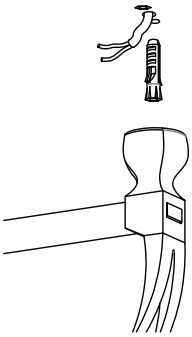

Apply plastic anhors

5

Tie up screws to make it stable

6

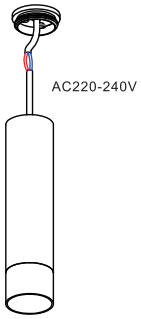

Connect wires

7



Apply the cap by rotate

8

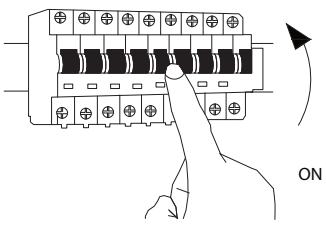

Turn on the general switch