


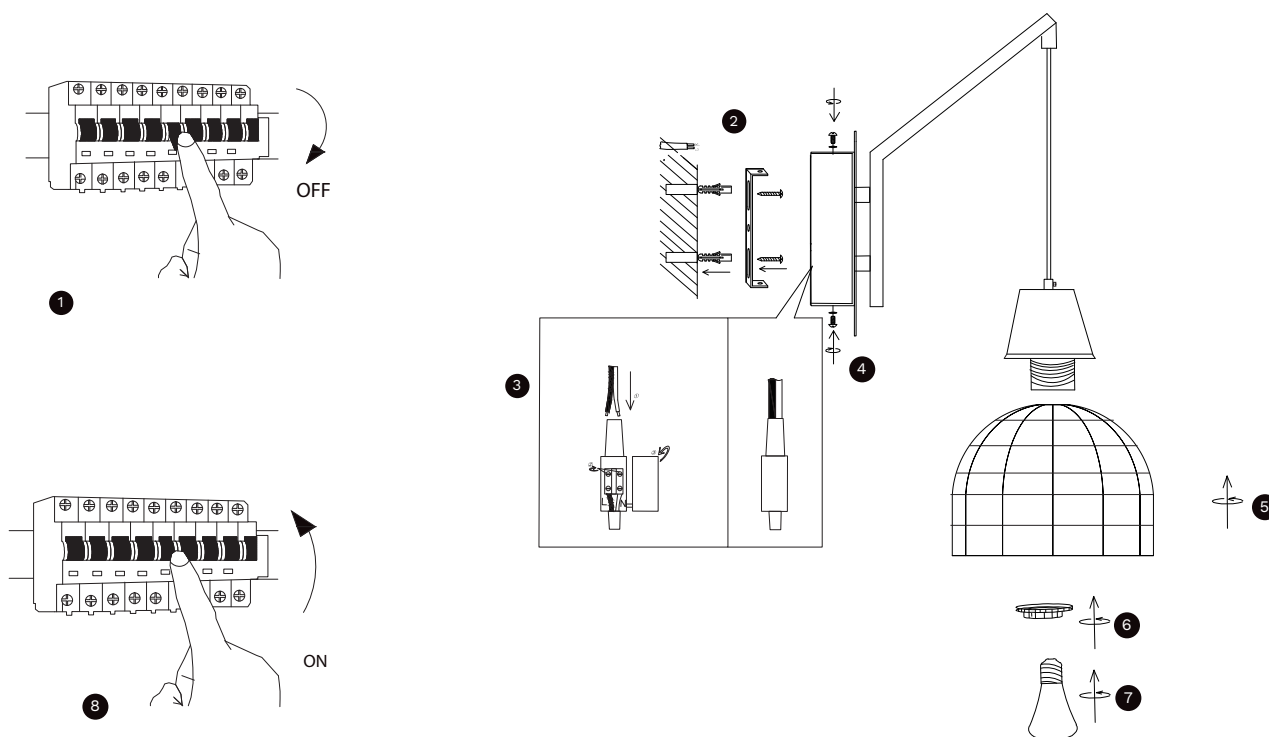

1. Turn off general switch
2. Align, Drill Holes & Make It Stable
3. Connect The Wires
4. Put It In Place & Apply side Screws
5. Apply rattan
6. 7. Apply the cap with the bulb
8. Turn on general switch

