
NOVA LUCE

9624084

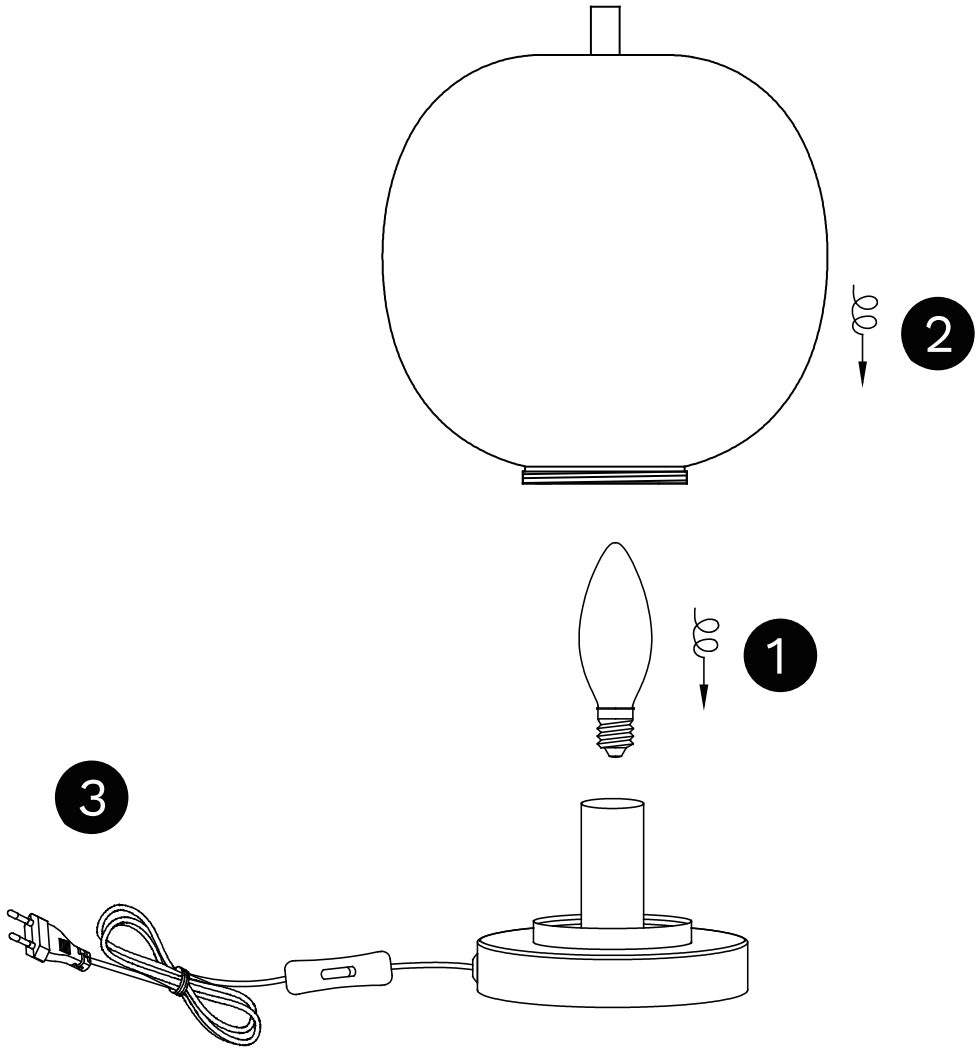

1. Insert the bulb
2. Put in place the acrylic
3. Apply the side screws