NOVA LUCE

9680100/ 9680101/ 9680102
9680103/ 9680104/ 9680105

Wiring Instructions

1

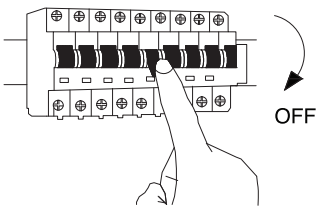

Turn off the general switch

2

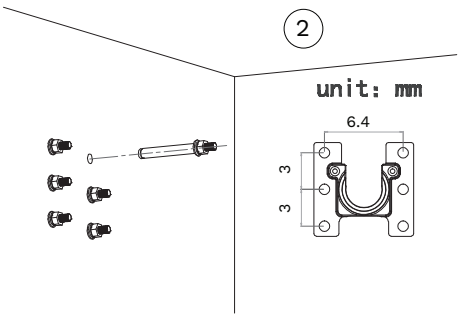

Apply the screws, mark & drill a hole

3

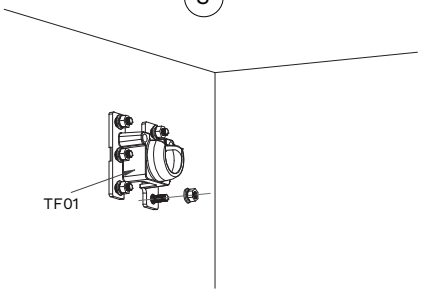

Fix well the base

4

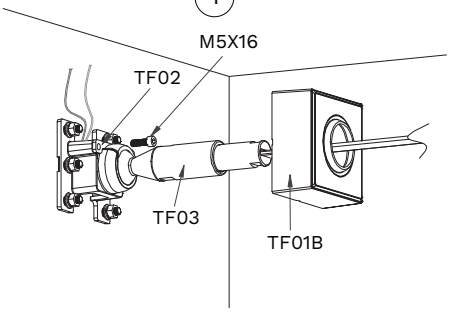

Fix the globular accessory by M5X16

5

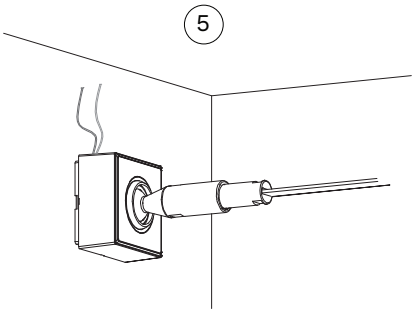

Cover TF01B onto TF02

6

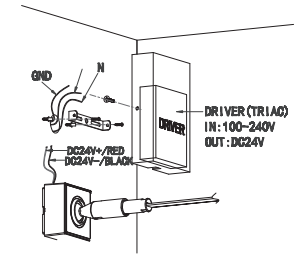

Connect wires for driver and track

7

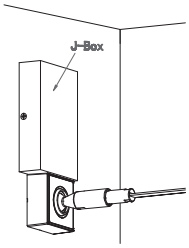

Apply the J-Box on the ceiling

8

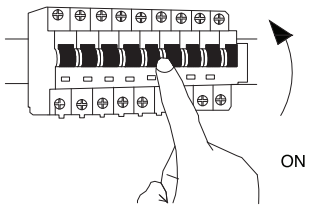

Turn on the general switch

Wiring Instructions - Side B1

1

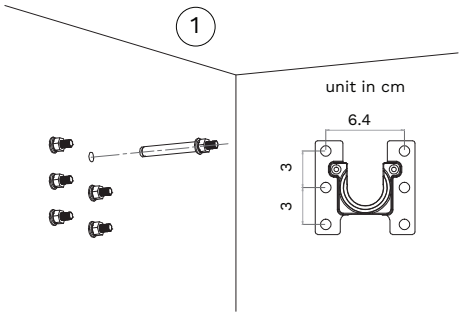

Apply the screws, mark & drill a hole

2

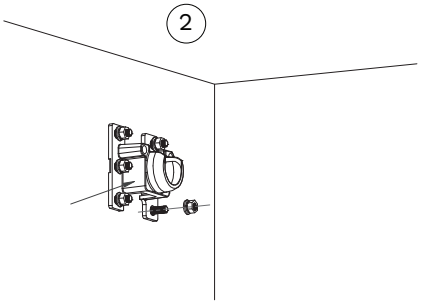

Cover TF01B onto TF02

3

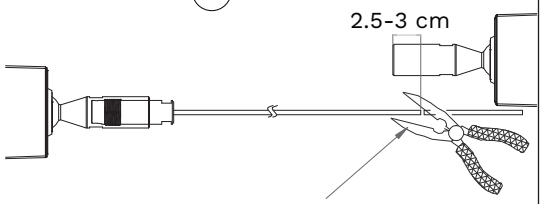

Straighten the track
& cut it at 2.5 cm

Remove the extra track by cutting it

4

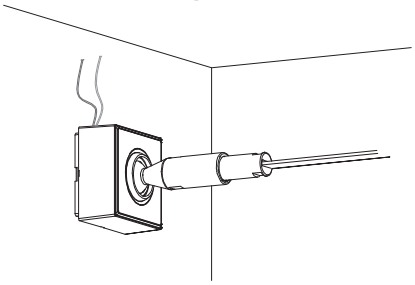

Cover TF01B onto TF02

5

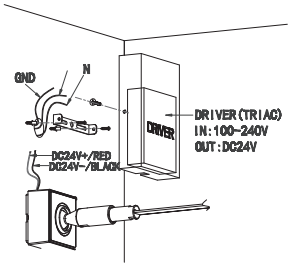

Connect wires for driver and track

6

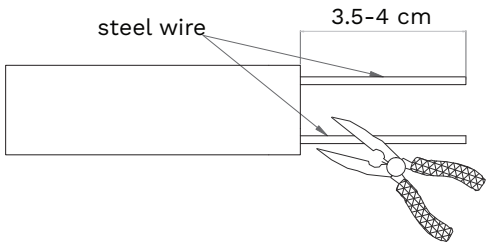

Peel off the plastic cover of the wires
& expose the steel wire

7

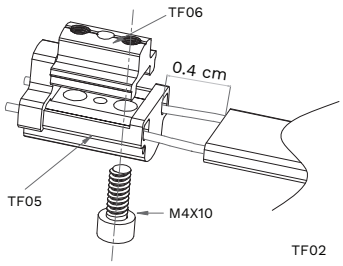

Nip the steel wire

8

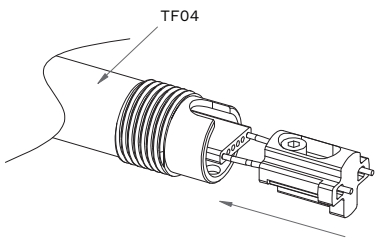

Insert the steel wire into TF04

Wiring Instructions - Side B2

1

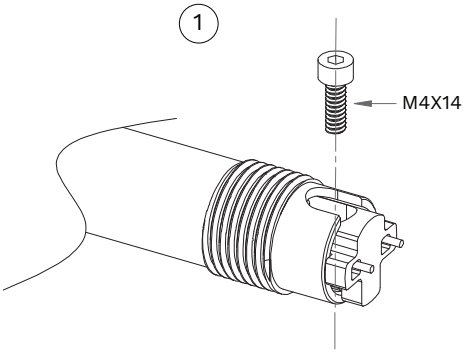

Apply the M4X12 screws & connect the TF04

2

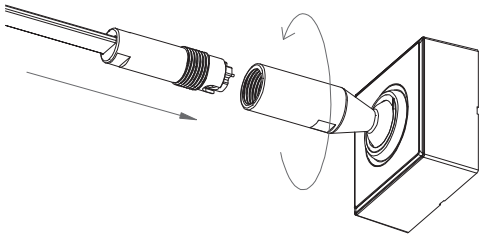

Rotate TF03 into TF04

3

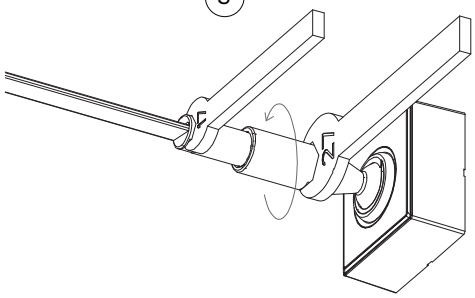

Tighten up by rotate

4

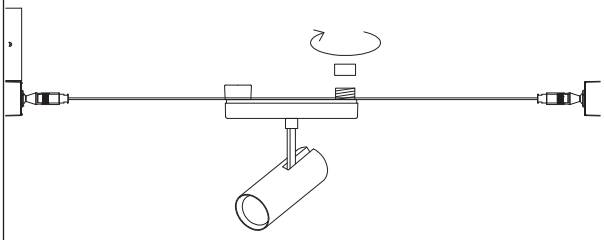

Install the lamps on track

Wiring Instructions - Side B3

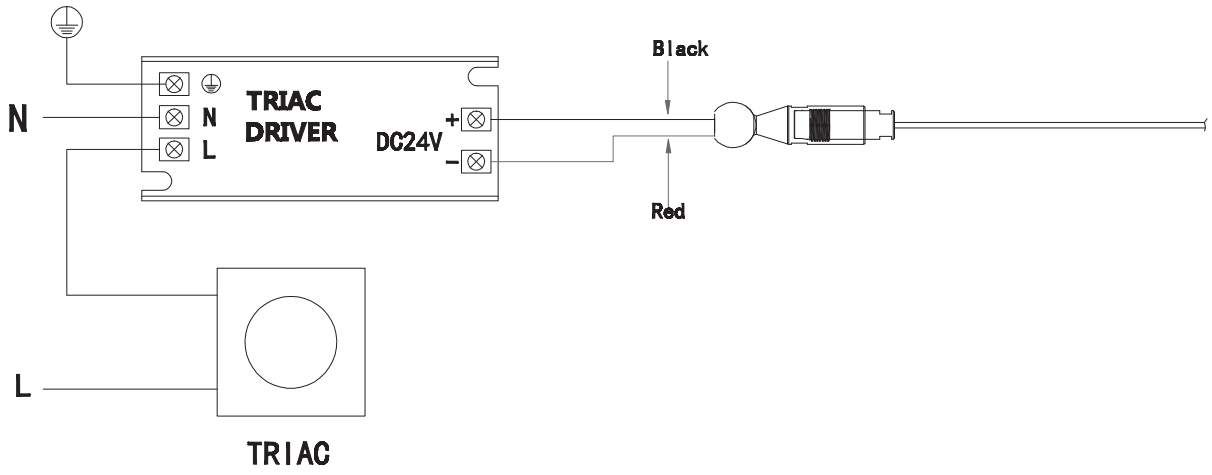

Connect two copper wires to the DC port of the power supply

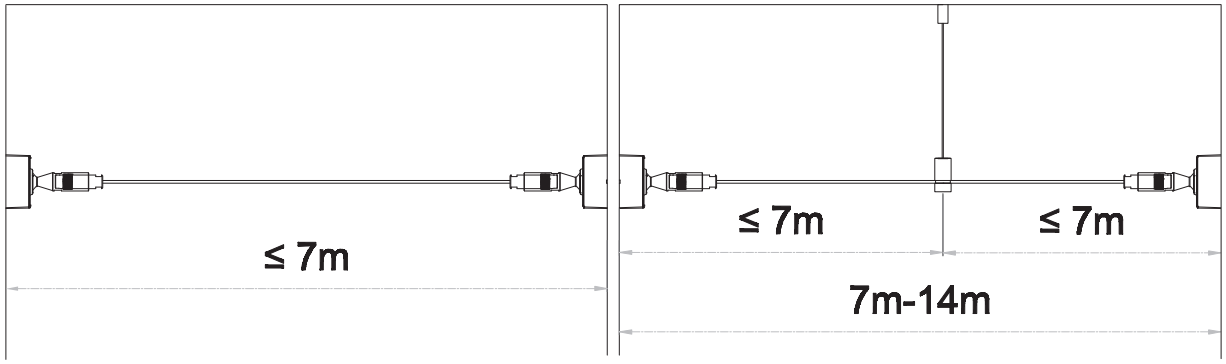

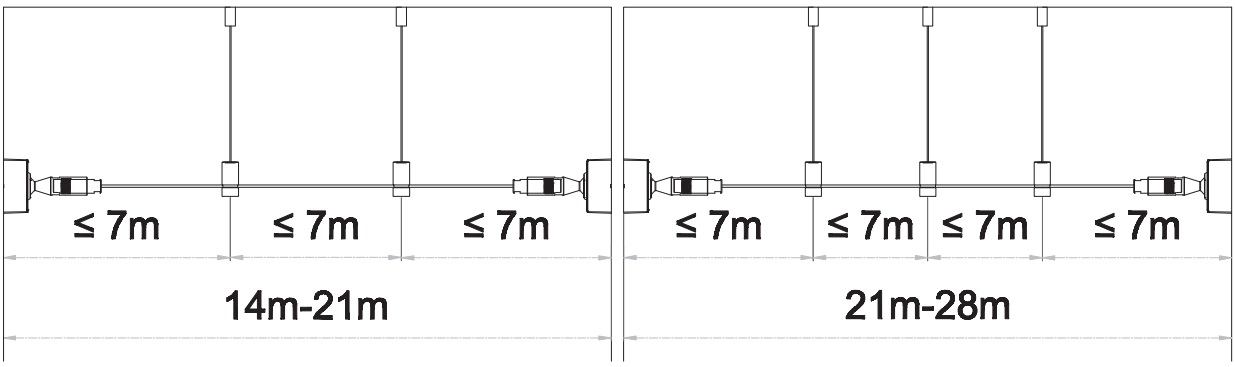

It is recommended to add messenger wire position