



1

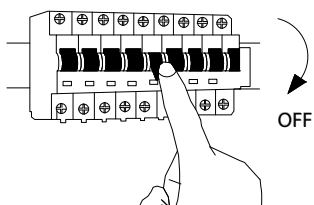


Turn off the general switch

2

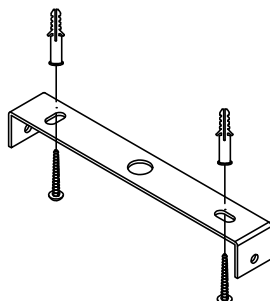


Align, mark & drill holes
Apply plastic anhors & screws

3

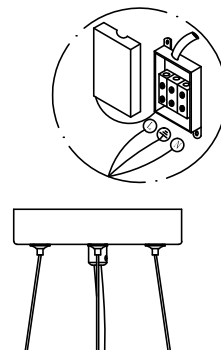


Connect wires

4

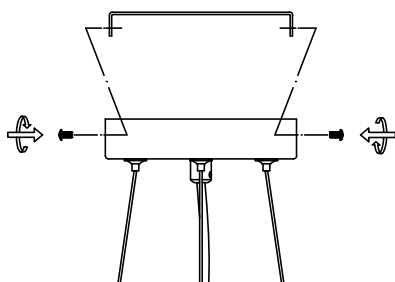


Apply side screws

5

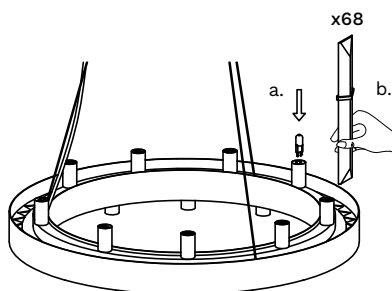

a. Insert bulbs by rotating
b. Apply the crystals (x68)

6

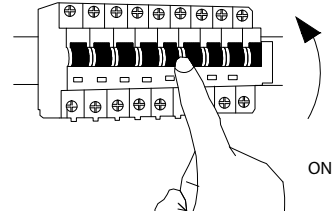

Turn on the general switch

