



1

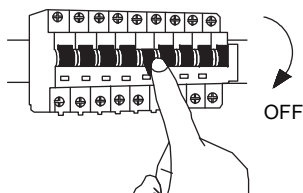


Turn off the general switch

2

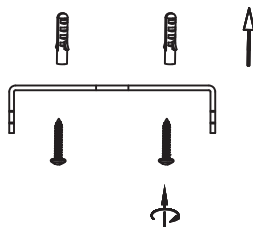


Align, mark & drill hole, apply plastic anchors & tie up the screws

3

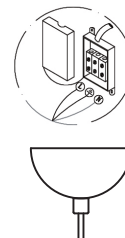

Connect the wires

4

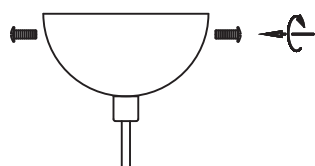


Apply the side screws in canopy

5



Apply side screw & adjust the cable

6

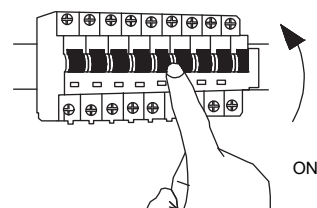

Turn on the general switch

