


NOVA LUCE


9701622

1

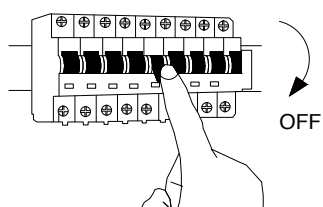


Turn off the general switch

2

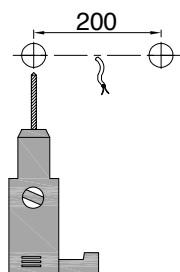


Drill holes

3

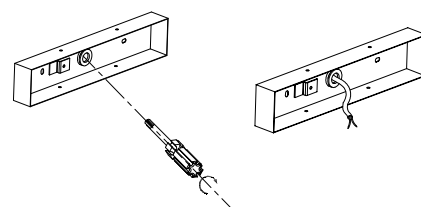


Get the wire through the hole

4

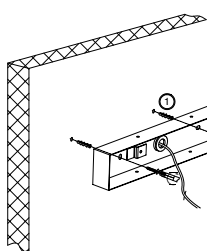


Get the wire through the hole
& Apply plastic anchors with screws

5

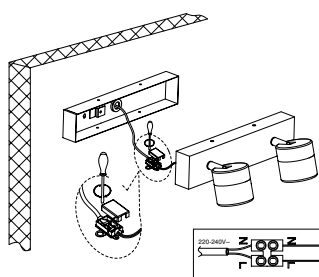


Connect the wires

6


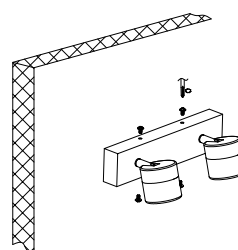


Apply all the nuts

7

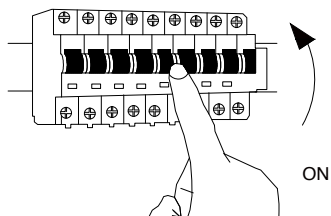

Turn on the general switch

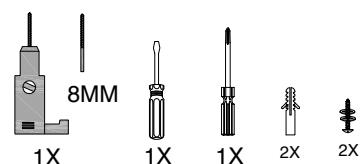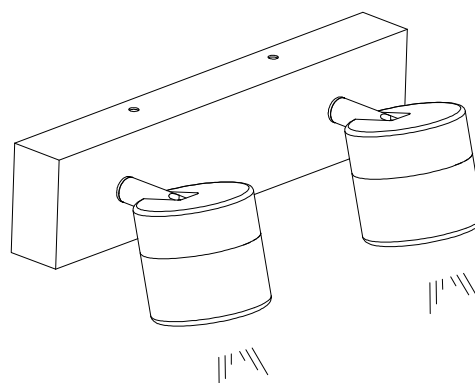

www.novaluce.com