




1. Turn off the general switch

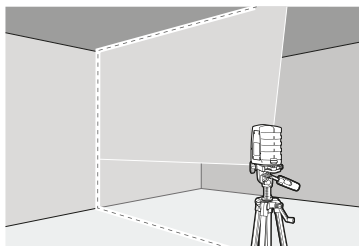


2. Align where to place the track

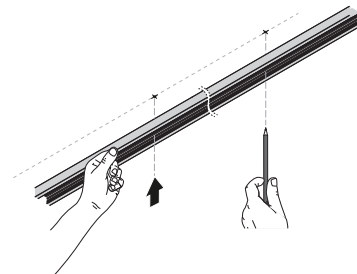


3. Mark where to drill

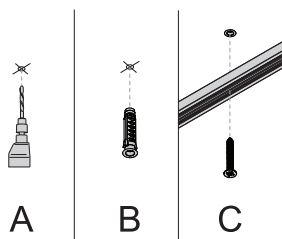



4. Apply plastic anchors & Screws

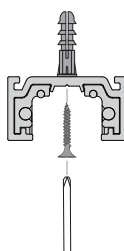


5. Apply the screws
In order to hold the track

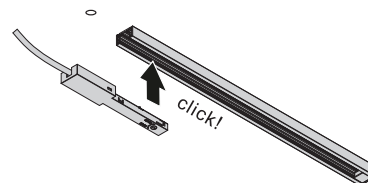


6. Click the product into place

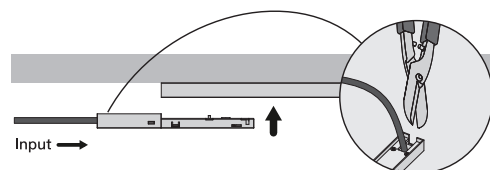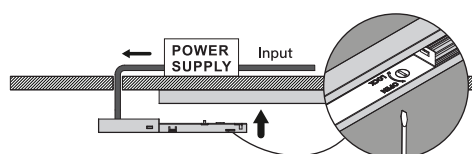

7. Control the LOCK / OPEN switch

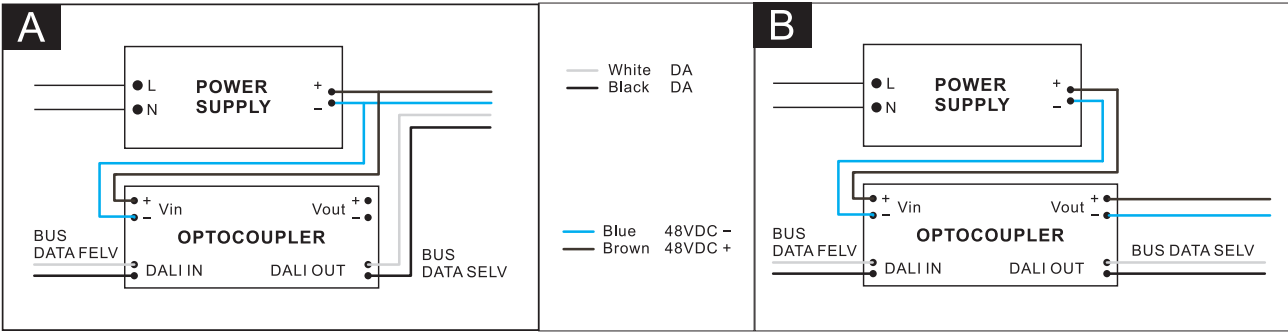

8. Connect the wires

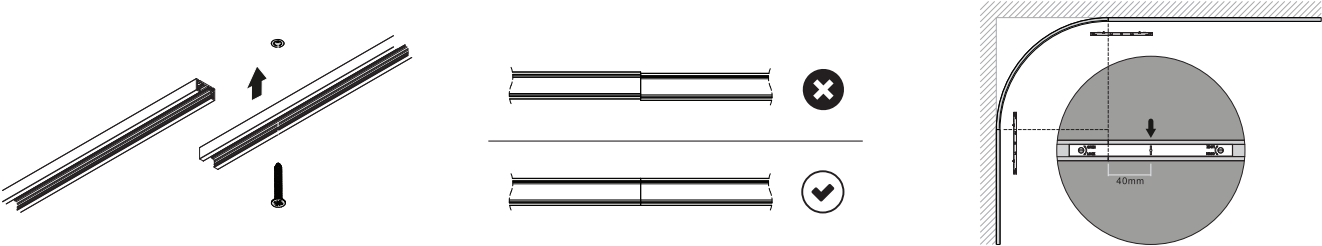

9. Repeat to get further

10. Make sure it is perfectly align

11. Make sure it is in the center


CABLE LENGTH

POWER SUPPLY 48V DC


TRACK LENGTH

VOLTAGE DROP TABLE		CABLE LENGTH(m)			
		< 5	< 10	< 20	< 30
POWER(W)	CABLE CROSS-SECTION(mm²)	TRACK LENGTH(m)			
		30	30	30	30
40	0,75	30	30	30	30
	1,5	30	30	30	30
60	0,75	30	30	20	10
	1,5	30	30	30	20
100	0,75	20	10	x	x
	1,5	20	20	10	x


12. Recommended track connection

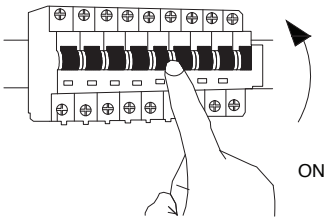


13. Turn on the general switch

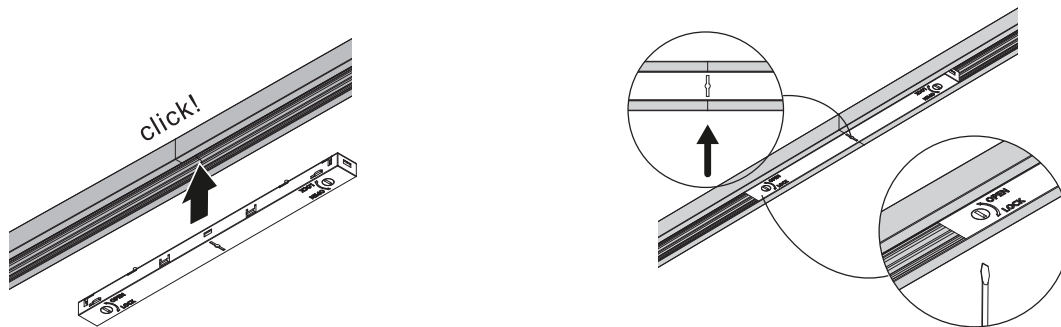


Strait connector

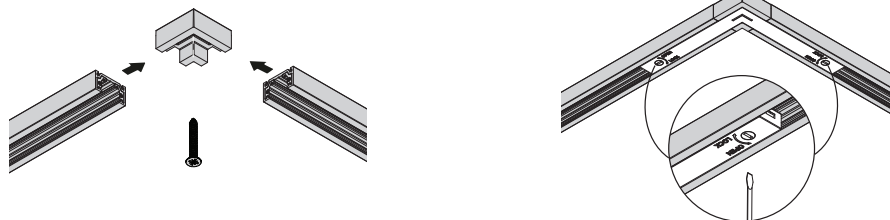

Corner 90°

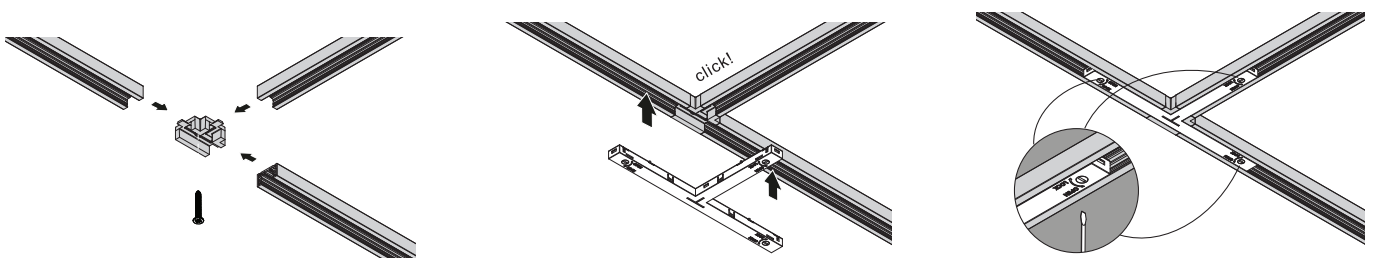




T Corner

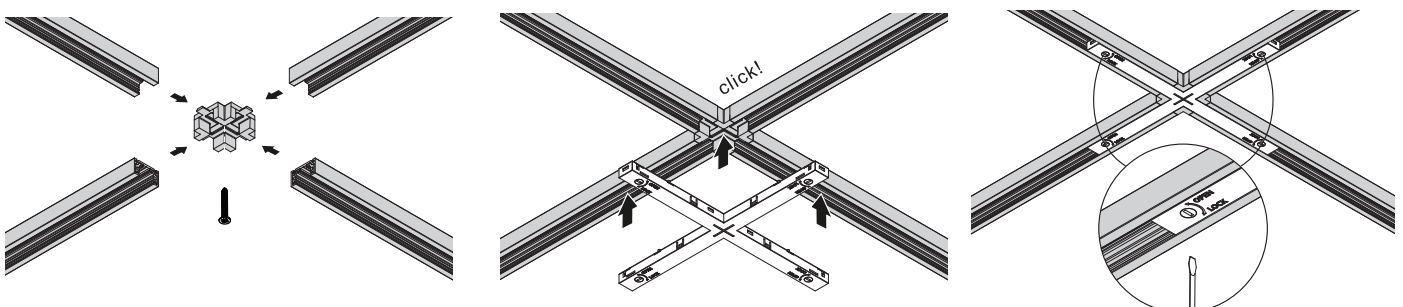




+ Corner

NOVA LUCE




WAYS TO CONNECT

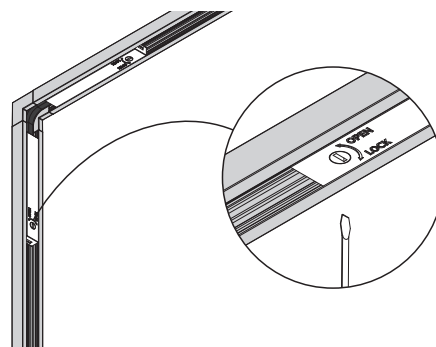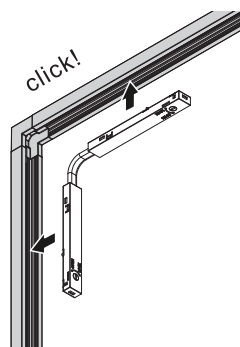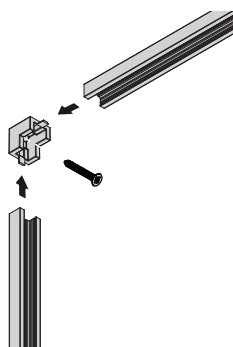

L Corner

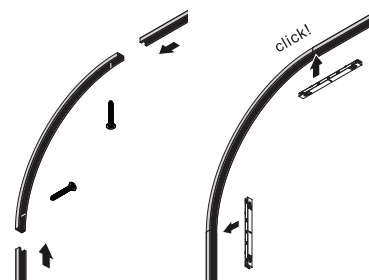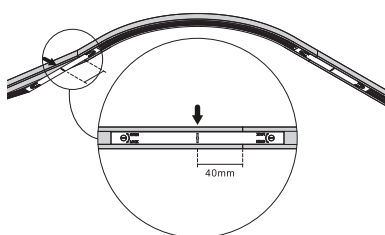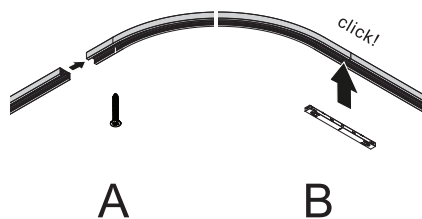

Corner V90°

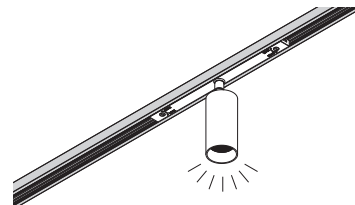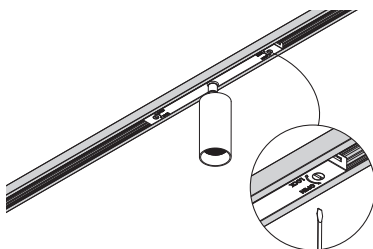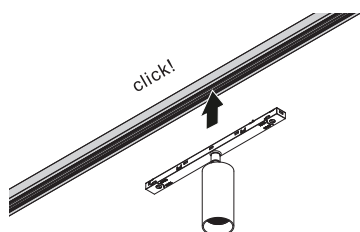

Click the product in to