




1. Turn off the general switch

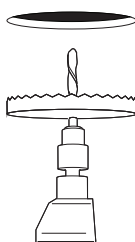


2. Drill D: 4 cm

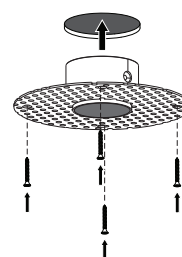


3. put the product in to place & apply screws

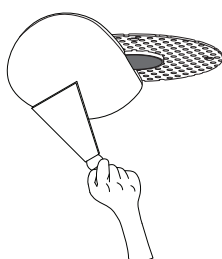


4. Cover the extras

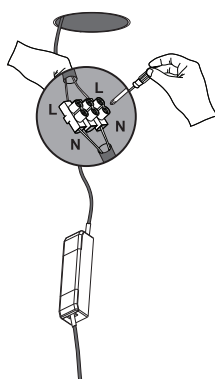


5. Connect the wires

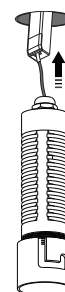

6. Fix it in place

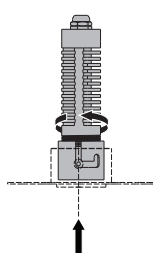

7. Push up & turn

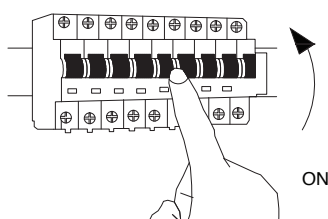

8. Turn on the general switch

