




1. Turn off the general switch

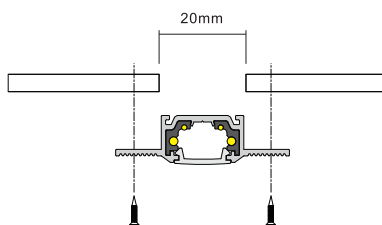


2. Align where to place the track

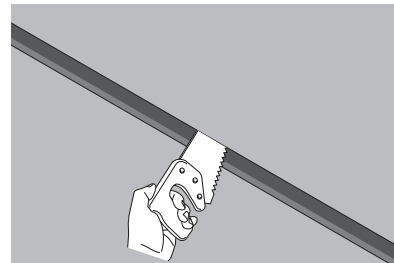

3. Cut it out

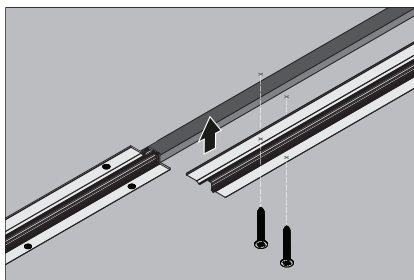





4. Apply screws

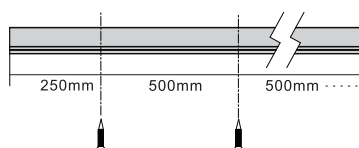


5. Screw installation




6. Carefully align the product

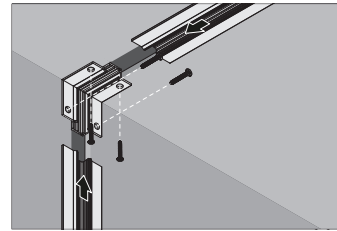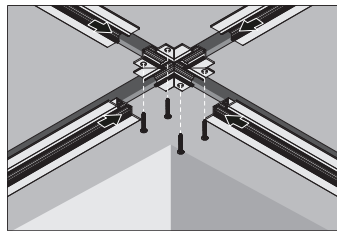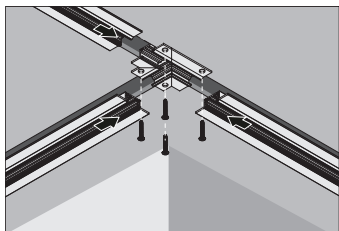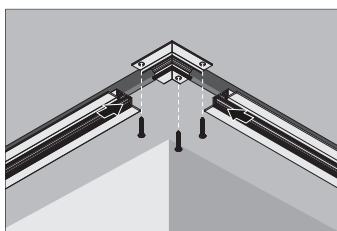


7. Make connections

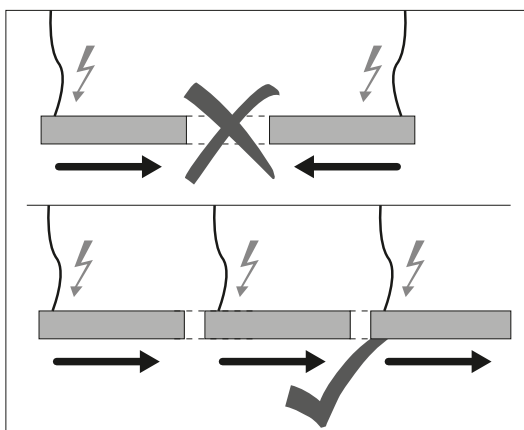


## 8. Connect

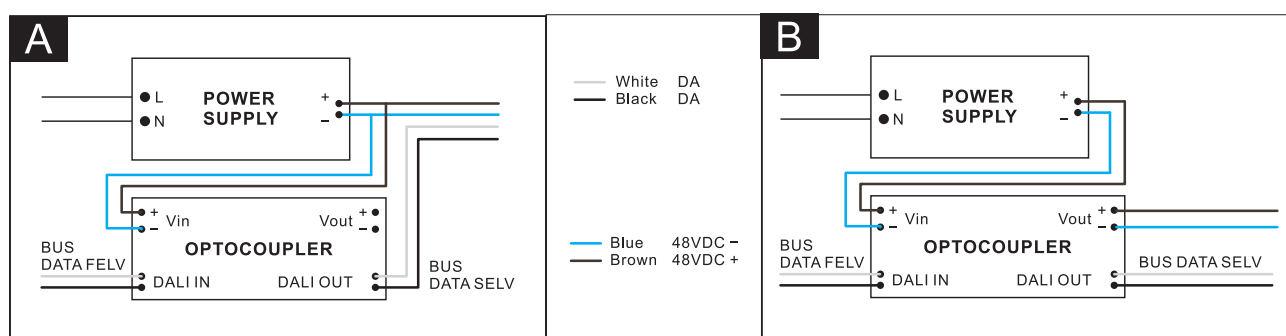

## 9. Connect the wires

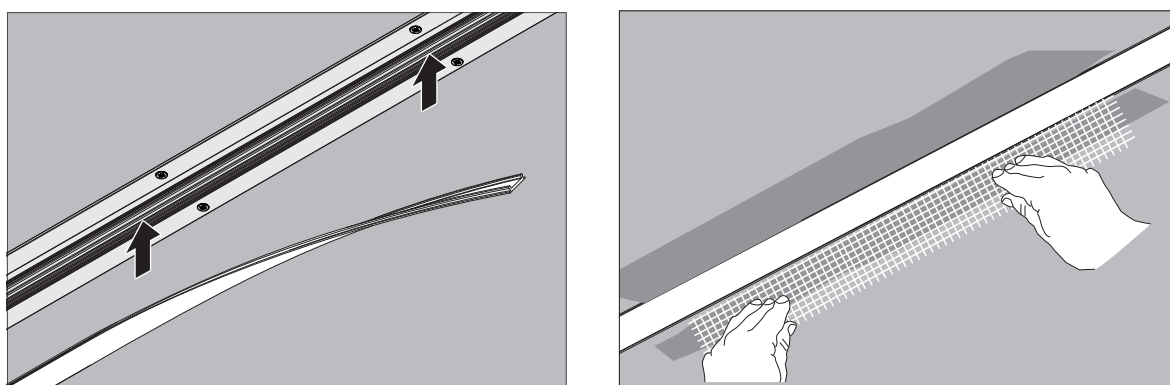


## 10. Cover the areas

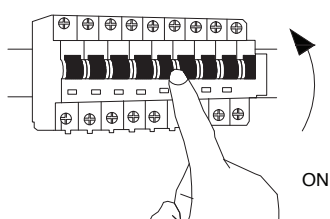


## 11. Turn on the general switch

# NOVA LUCE


## WAYS TO CONNECT

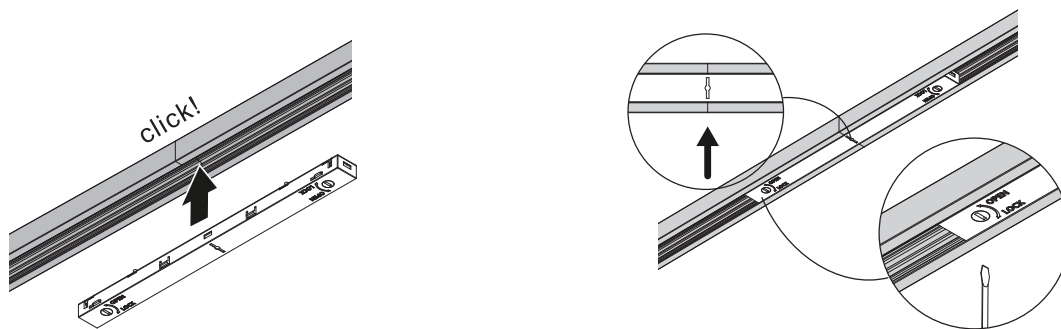


Strait connector

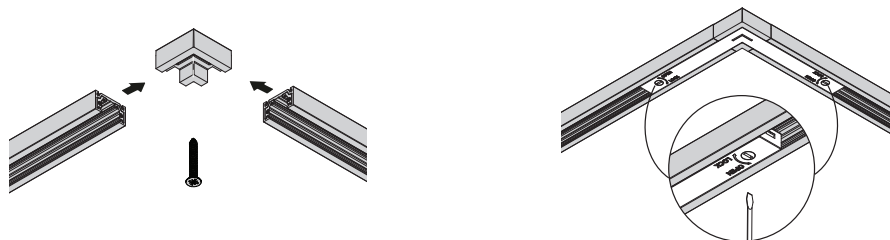

Corner 90°

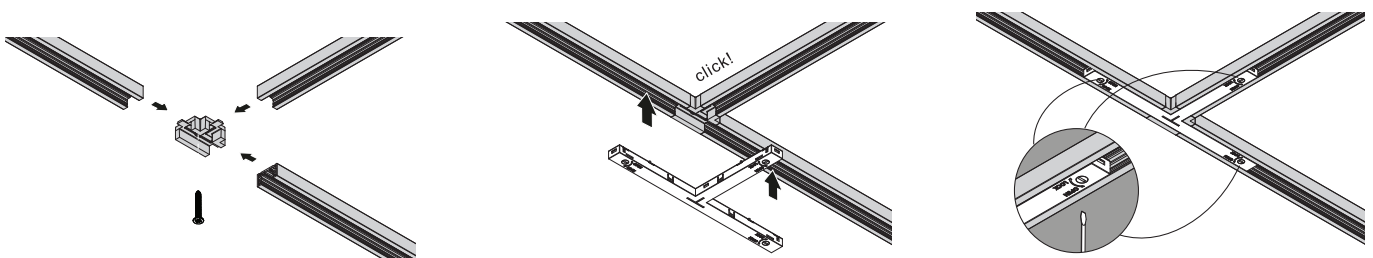




T Corner

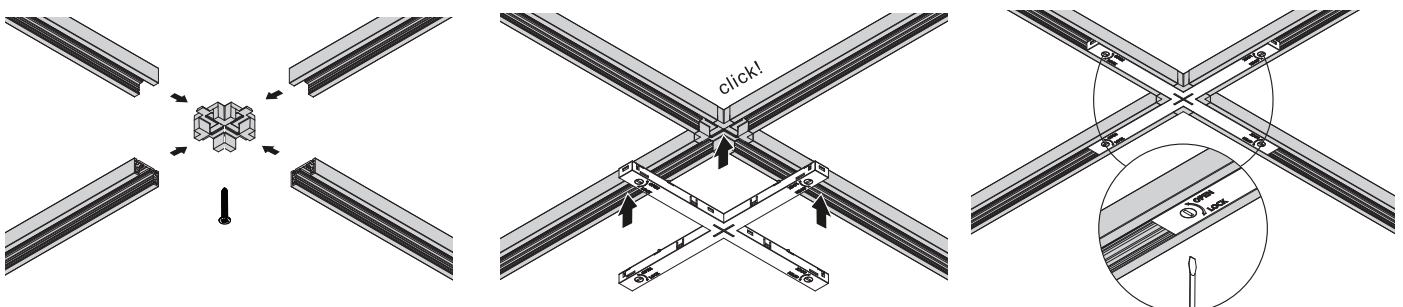




+ Corner

# NOVA LUCE




## WAYS TO CONNECT

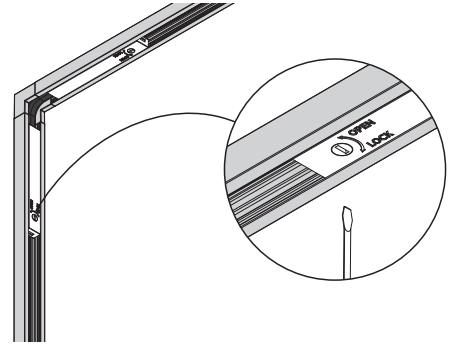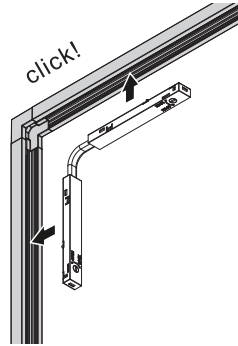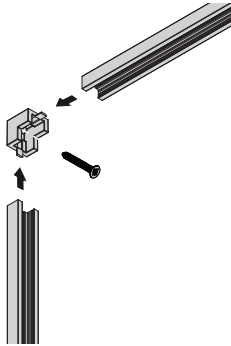


L Corner

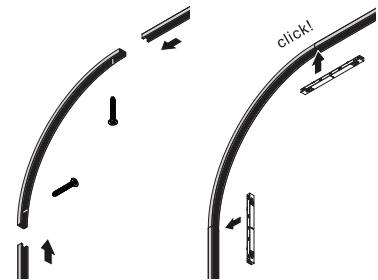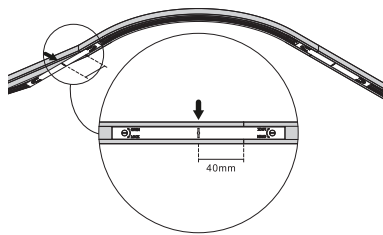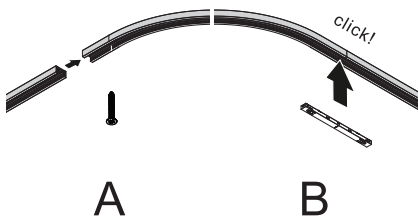


Corner V90°

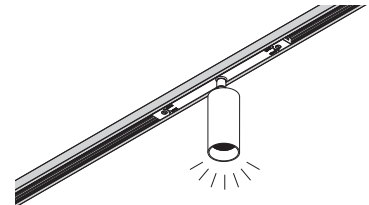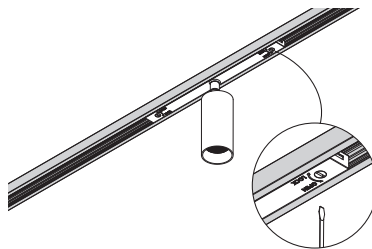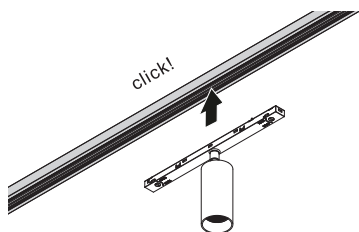


Click the product in to

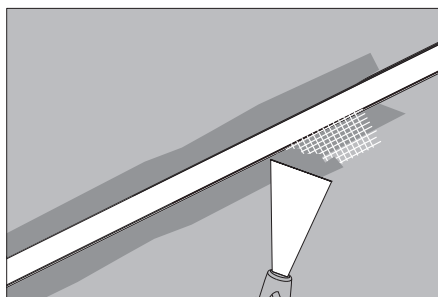


12 Apply cement

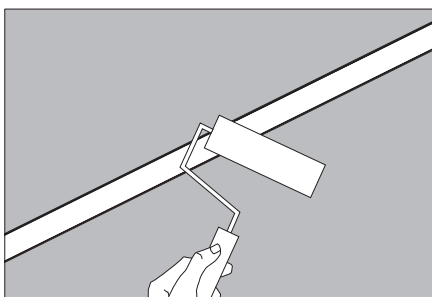


13 Paint

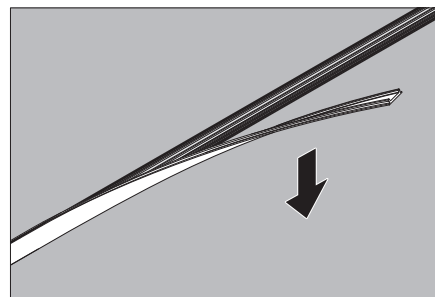

14 Apply the top cap

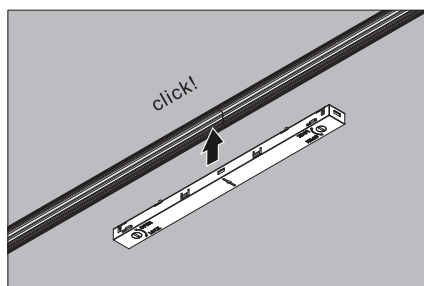


15. Click the product in to place

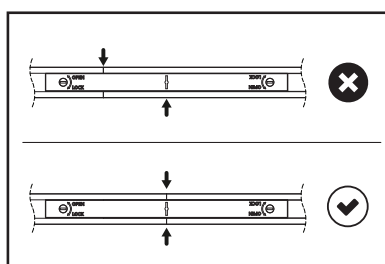

16. Make sure its in the center



17. Do not bridge conductors

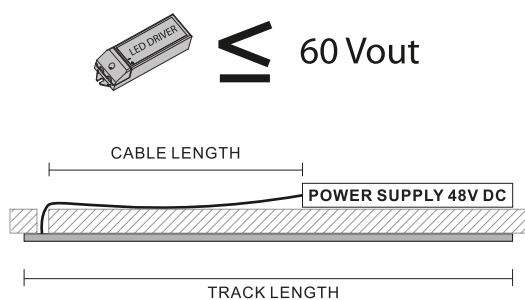

VOLTAGE DROP TABLE

| POWER(W) | CABLE CROSS-SECTION(mm²) | CABLE LENGTH(m) |      |      |      |
|----------|--------------------------|-----------------|------|------|------|
|          |                          | < 5             | < 10 | < 20 | < 30 |
|          |                          | TRACK LENGTH(m) |      |      |      |
| 40       | 0,75                     | 30              | 30   | 30   | 30   |
|          | 1,5                      | 30              | 30   | 30   | 30   |
| 60       | 0,75                     | 30              | 30   | 20   | 10   |
|          | 1,5                      | 30              | 30   | 30   | 20   |
| 100      | 0,75                     | 20              | 10   | x    | x    |
|          | 1,5                      | 20              | 20   | 10   | x    |

18. Recommended track connection