



1

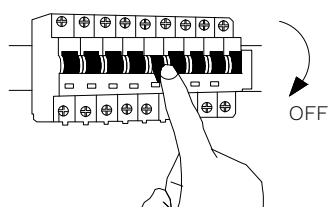


Turn off the general switch

2

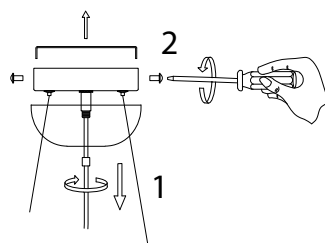


Untight the screws

3

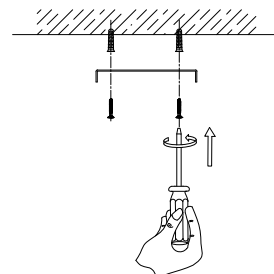


Drill holes apply plastic anchors with screws

4

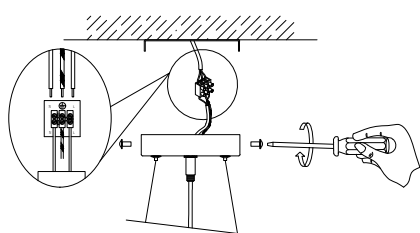


Connect the wires

5

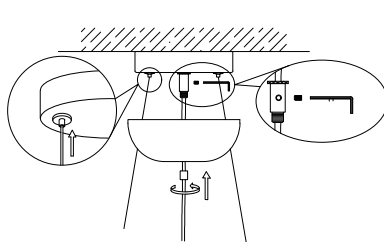

Tight the screws up
& place the canopy in place

6

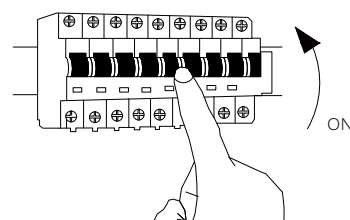

Turn on the general switch

