
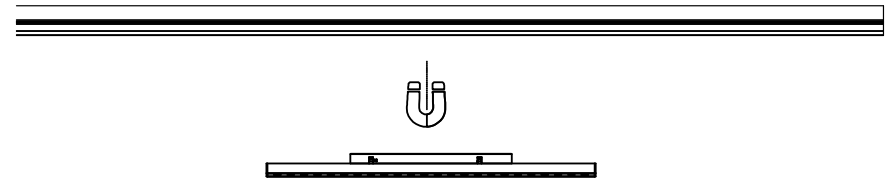


NOVA LUCE

INSTALL


9136130 / 9136131 / 9136143 / 9146148 / 9146150

Example of surface installation

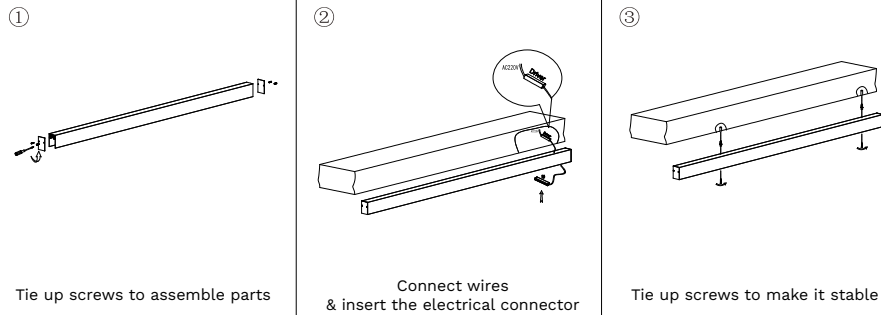

Example of corner installation


9136303 / 9110022
9136290

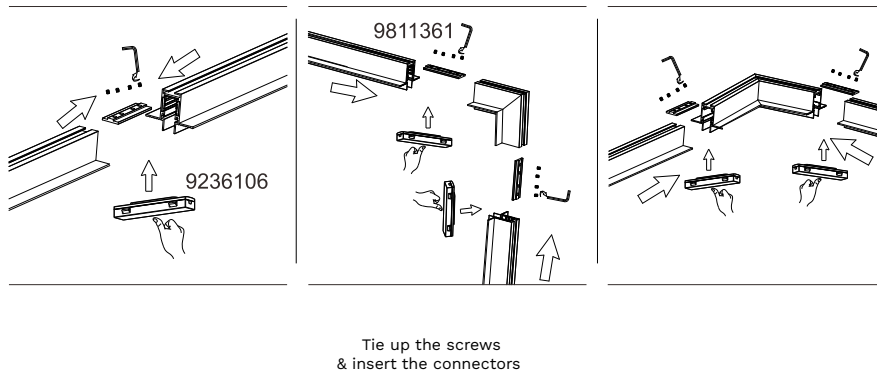

www.novaluce.com

Example of Recessed installation

9999101

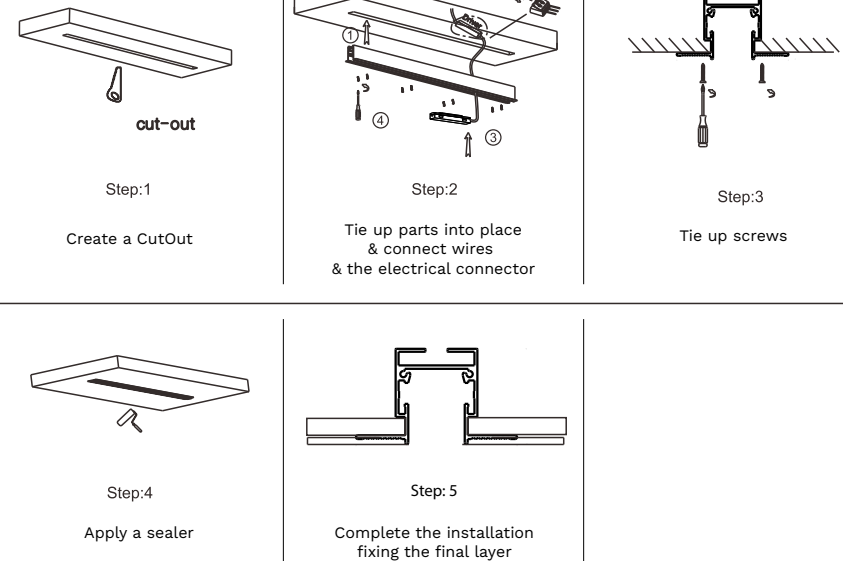


www.novaluce.com

NOVA LUCE

Example of recessed installation

9136335 / 9136100

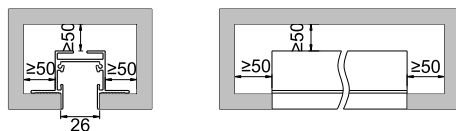

① Create a CutOut	② Connect wires	③ Fix it in place
④ Tie up screws to tie up screws	⑤ Connect the electrical connector	⑥ Insert it in place
⑦ Insert it in the CutOut	⑧ Tie up screws to make it stable	⑨ Complete the installation
⑩ Tie up screws to make it stable	⑪ Apply a sealer	⑫ Apply paint

Example of hanging installation

9136338 / 9236107 / 9136101

① Make holes	② Apply plastic anchors	③ Fix parts into place by rotate
④ Tie up screws to assemble them	⑤ Connect the track by rotate	⑥ Assemble parts by applying screws
⑦ Insert the electrical connector into place	⑧ Connect wires & connect tracks together by rotate	⑨ Complete the installation