
NOVA LUCE


9019811

1

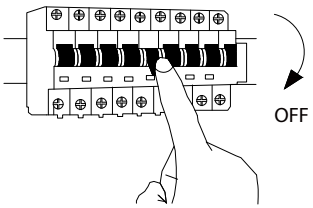


Turn off the general switch

2

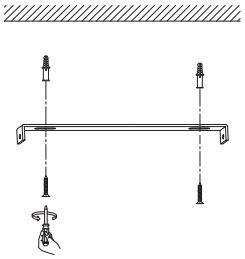


Drill holes & apply plastic anchors
With screws

3

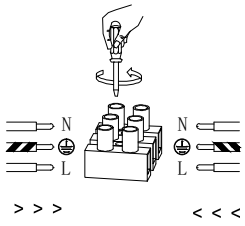


Connect the wires

4

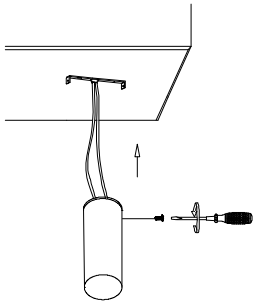



Apply side screws

5

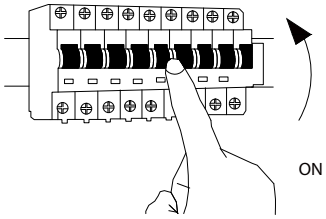

Turn on the general switch

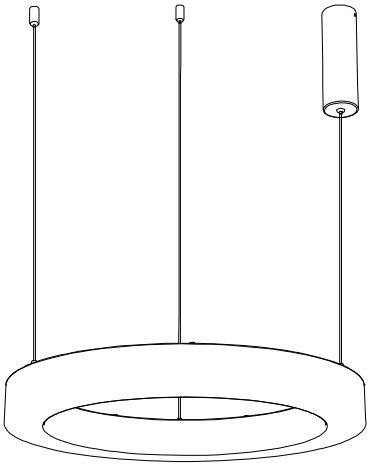

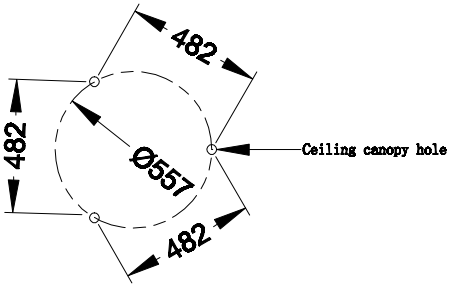

www.novaluce.com