
NOVA LUCE

Wall
9083032


1

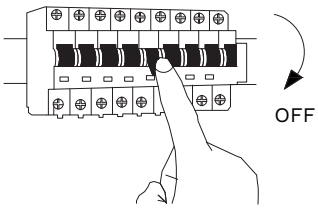

Turn off the general switch


2

9083031
9083032

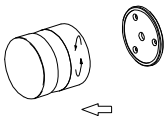


Dismantle the luminare

3

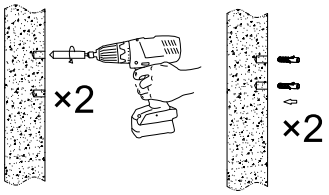


Drill holes apply anchors

4




Apply screws

5

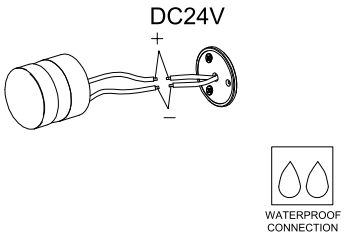


Connect wires

6

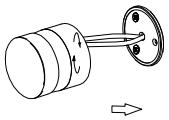


Apply the element in to place

7

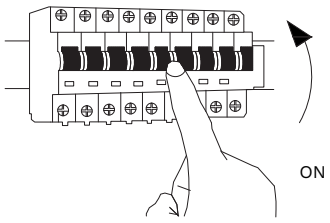

Apply the side screws

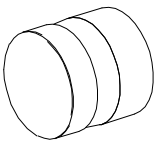


9083033

NOVA LUCE

Floor
9083032


1

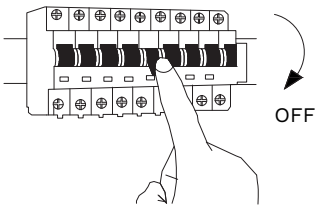

Turn off the general switch


2

9083031
9083032




Dismantle the luminare

3

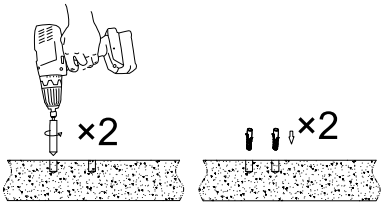


Drill holes apply anchors

4




Apply screws

5

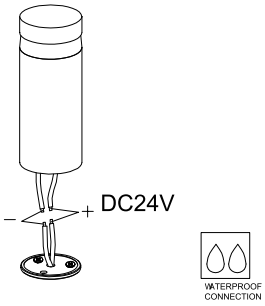


Connect wires

6




Apply the element in to place


7

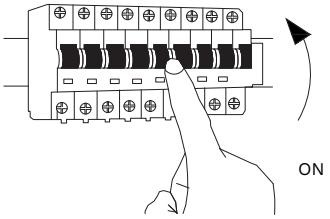


Turn on the general switch



9083034



9083035



9083036