NOVA LUCE

9210313

1

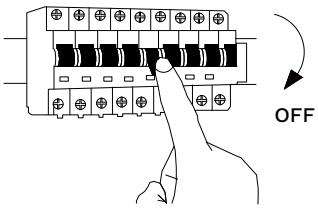

Turn off the general switch

2

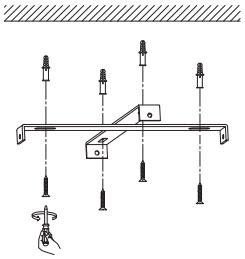

Drill holes apply screws
& Plastic anchors

3

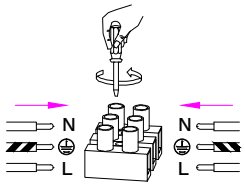

Connect the wires

4

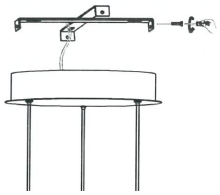

Apply the side screws

5



Apply the canopy by rotating

6

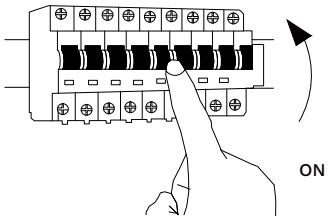

Turn on the general switch

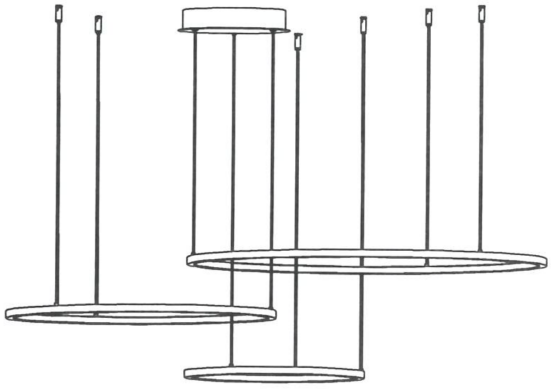

www.novaluce.com